


Installation Pattern

SEQUENT™ RETAINING WALL PANEL SYSTEM

Sequent™ panel system featuring Diamond Pro Stone Cut® and Highland Stone® 6" multipiece retaining wall systems

42-INCH BY 6-FOOT INSTALLATION PATTERN

This installation pattern is one of many possible options. Others can be used for different appearances.

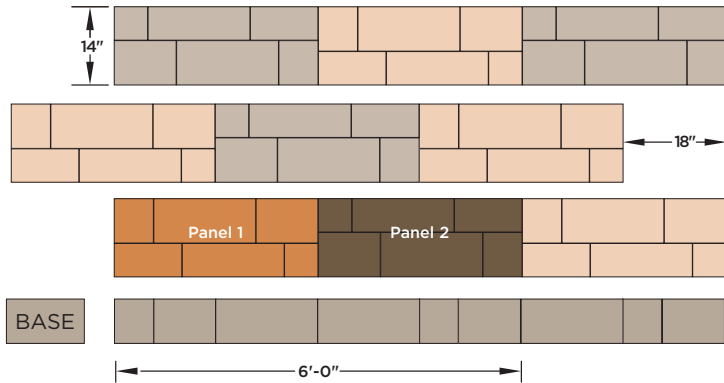

INSTALLATION GUIDELINES


Install the base course using best practices. The wall is built with a series of panels in a repeating installation pattern. Install filter fabric behind wall.

Follow these steps to build panels.


- 1 Start by using all three units of either product.




- 2 Next, use all three units of the other product and stack them on the first three units, staggering the bond. This completes one panel. (See orange-colored area in Installation Pattern.)

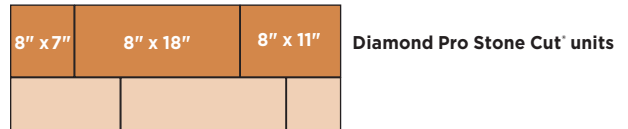

- 3 Working along the wall, next use all three units of the alternate product.

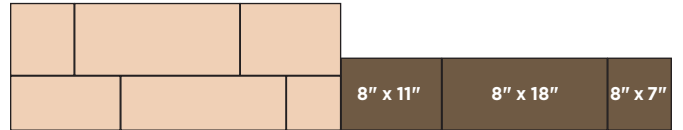

- 4 Use alternate product and stack units on the course described in step 3, staggering the bond. This completes the second panel. (See brown-colored area in Installation Pattern). Repeat panel installations across the base course.

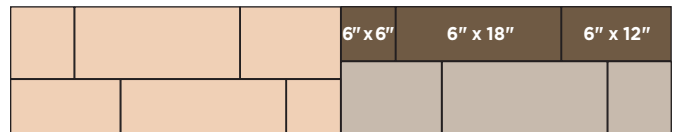

- 5 Backfill, compact and install grid or structural backfill, if needed.

- 6 Start the next set of panels by staggering the first unit 18 inches to the right or left of lower panels and repeat step 1.

Continue to install panels to complete the wall.

© 2011 Anchor Wall Systems, Inc. The Diamond Pro Stone Cut® and Highland Stone® wall systems are manufactured under license from Anchor Wall Systems, Inc. (AWS). The "Anchor Build Something Beautiful" logo, "Diamond Pro Stone Cut," "Highland Stone" and "Sequent" are trademarks of AWS. The wall system blocks are covered by the AWS Limited Warranty. For a complete copy, visit your local dealer or see anchorwall.com.

Anchor Wall Systems, Inc., 5959 Baker Road, Suite 390, Minnetonka, MN 55345.
A&B0810

73.3241.1 10/11 4006