








INSTALLATION INSTRUCTIONS AND TIPS

Brisa® 6" Freestanding Wall Systems

CALL 

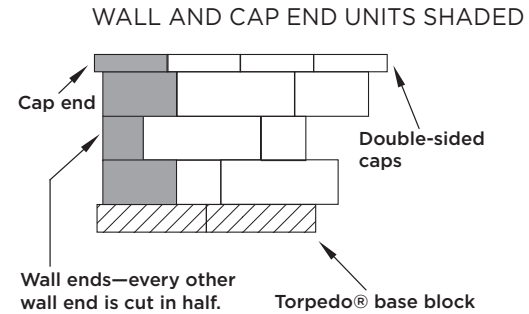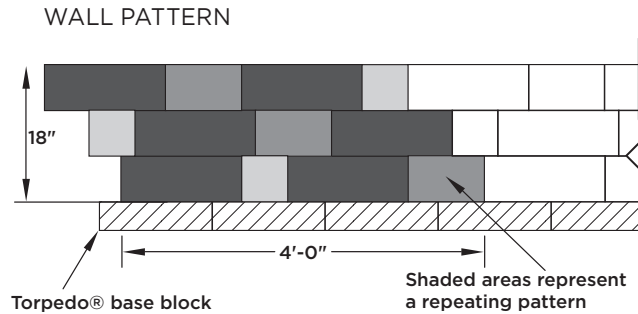
EAGLE BAY HARDSCAPE PRODUCTS
BEFORE YOU START
1-800-321-9141 



Blocks Required (one set)	
(2) 6" x 16"	
(1) 6" x 10"	
(1) 6" x 6"	

STEPPING UP THE BASE


Begin excavation at the lowest point and dig a level trench, 24 inches wide, into the slope until it is deep enough to accommodate the base material and one entire base block.

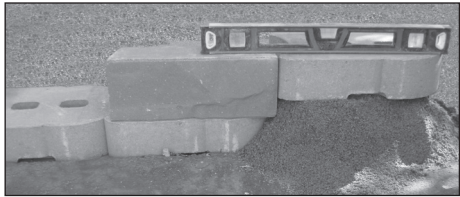


At this point, step up the height of one block and begin a new section of base trench. Use a 6-inch-high unit on the base course to level the base unit that is stepped up. Continue to step up as needed to top of slope. Always bury at least one full base block at each step up.

WALL COURSES

Glue all courses. Use a 1/2-inch-diameter bead of glue, 3 inches apart, placed in the front half of the block.

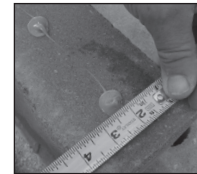


Build one layer of the pattern and glue to base units. Work from one side of the pattern.

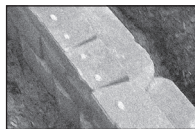

Build a separate wall on each side of the base unit. Maintain a consistent gap between walls.

Continue to build the pattern in layers, using a tool such as a level as a spacer to keep the distance between walls uniform. Check horizontal and vertical levels of each wall.

Periodically check the distance between the wall faces to ensure consistent spacing.

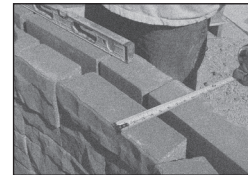

END A WALL WITHOUT A COLUMN

Start pattern next to a wall end unit if the wall does not end with a column.



Every other wall end is cut in half.

FINISH WITH CAP END

If cap needs to be cut, cut an interior cap, place and glue cap end.

